




*Van Nicholas*

THE TITANIUM BIKE EXPERTS


TITANIUM SEATPOST INSTALLATION GUIDE




Tools Needed: 5mm Allen wrench, lock ring pliers.

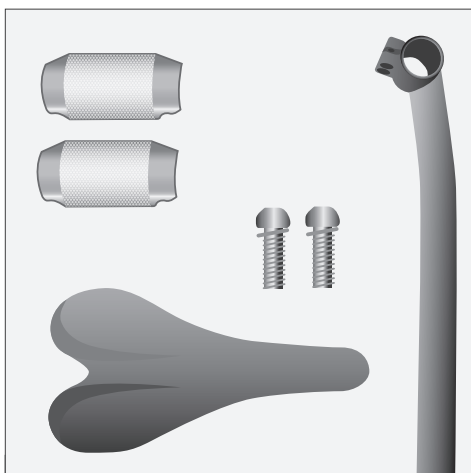


1. Remove the bolts and aluminum carriers from the seatpost.

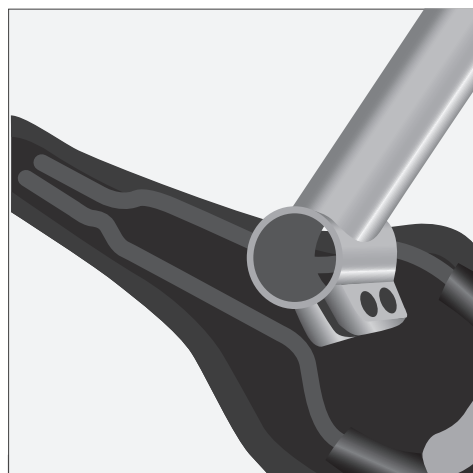


2. Lay the saddle upside down on a table and position the seat post between the saddle rails and insert the upper carrier piece.

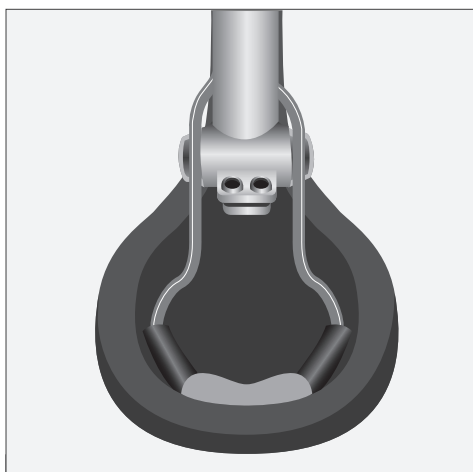


3. Insert upper carrier.

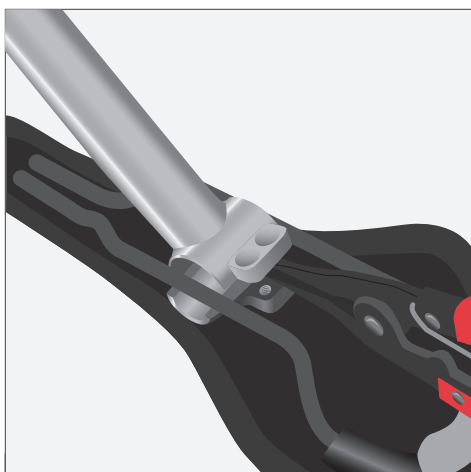


4. Spread seat post clamp with Craftsman lock ring pliers.

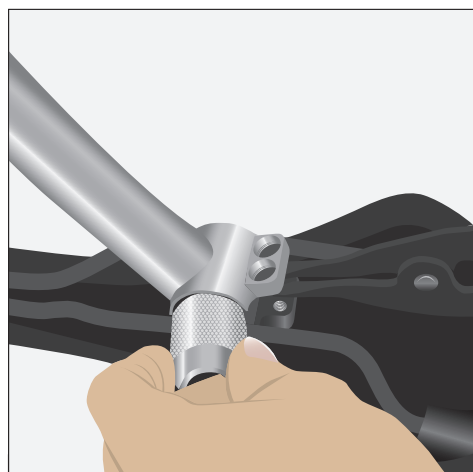

5. Insert lower carrier.

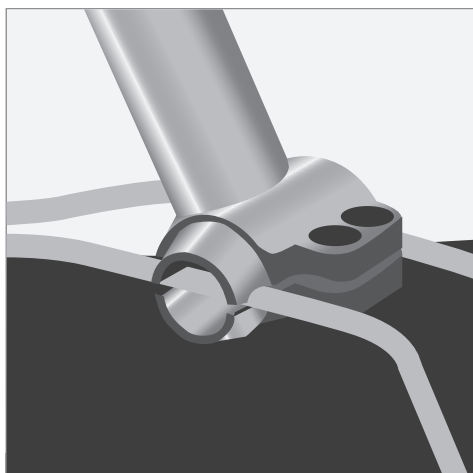

6. Adjust carrier to desired position.

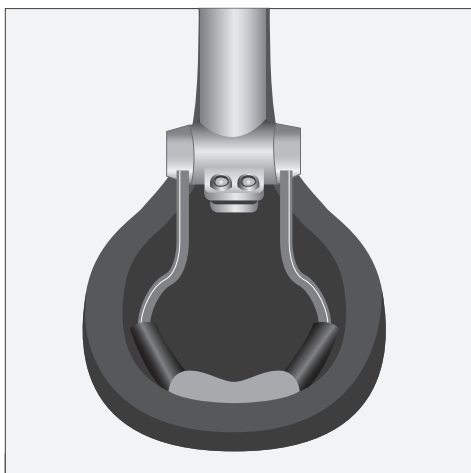

7. Install bolts. Use supplied Ti-Prep. Be careful not to cross thread as the clamp is slightly spread at this point. If needed, squeeze the clamp together with pliers. This is not necessary, but helpful.



8. Completed Installation. Note the seat post has a slightly set back position.